 




McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, New York 13903-2699 Phone: 607-723-3512 www.mcintoshlabs.com

HR070 Series
Remote Control
Programming Guide

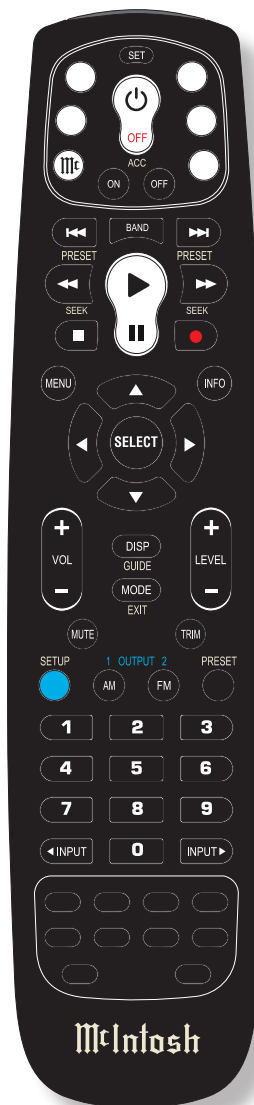



Introduction

The McIntosh HR070 Series Remote Controls (HR070, HR071, HR072 and HR073) supplied with McIntosh Preamplifiers, Integrated Amplifiers, A/V Control Centers, and Source Components not only control a McIntosh Component System, but also have the ability of controlling non McIntosh Components in your system. Refer to figures 1 through 4

The HR70 Series Remote Controls have stored in permanent memory the necessary information to send the correct commands to the component to be controlled. By entering a five digit numeric code the commands for controlling the component is activated.

In the event the Remote Control doesn't have the code to control a particular component, the Remote Control has the ability to learn and store the IR Signals sent out by the Remote Control originally supplied with the component.

Battery Information

Use only fresh batteries of the required size and recommended type. When the battery voltage is low, the  Push-button will blink 5 times after another Push-button on the Remote Control is pressed. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

If the Remote Control will not be used for an extended period, remove the batteries. They can leak chemicals and destroy the Remote Control.

When discarding the Remote Control, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

For additional information please visit the McIntosh Web Site at www.mcintoshlabs.com.

Installing Batteries

1. Open the battery compartment cover (located on the back of the remote).
2. Place the AA batteries in the compartment and match the + and - polarity symbols inside.
3. Replace the cover.

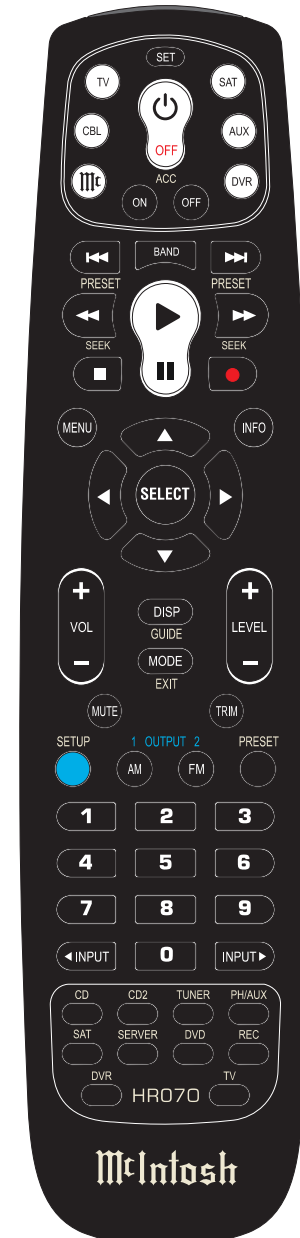 


Figure 1

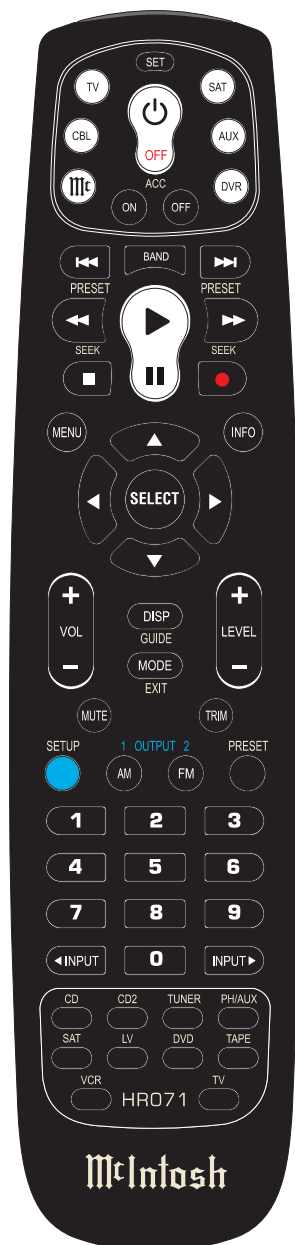 


Figure 2

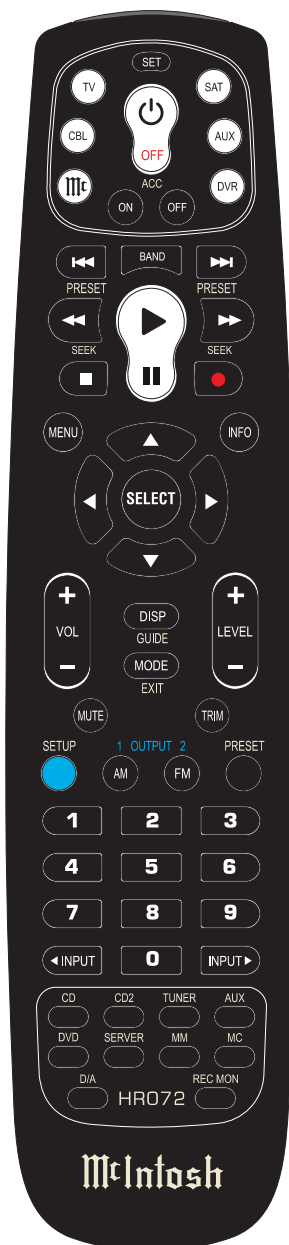 


Figure 3

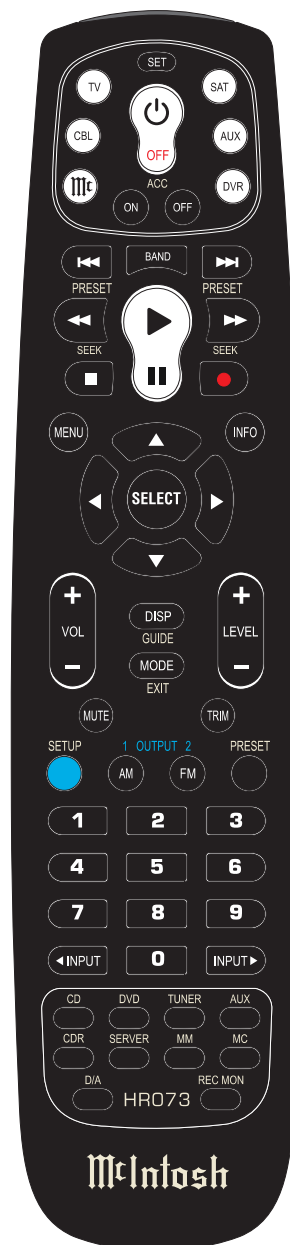 


Figure 4

Table of Contents

Introduction.....	2
Battery Information	5
Installing Batteries.....	6
Installation	7



Programming a Component

Program this Remote Control by first find the codes for the components you want to program (starting on page XX) and then follow the steps below:

1. Turn on the component (in this example, the TV).
2. Press TV Push-button on the Remote Control to be programmed. Refer to figure 5.
3. Press and hold SET Push-button until the Push-button illumination blinks twice, then release.
4. Enter the first five-digit code for the component (TV) and brand that you wish to program. The Push-button blinks once as each digit is entered. If the code is valid, the Push-button blinks twice.
Note: If the Push-button does not blink twice, repeat steps 2 to 4 and try entering the code again.
5. Aim the McIntosh Remote Control at the component and press Power Off. The TV should turn Off. If it does not, repeat steps 3–5, trying each code for your brand until you find one that works. If you cannot find a working TV codes refer to “Searching Codes” on this page.

Note: There might be more than one Program Code Number capable of switching power Off to the TV. Choose the Code Number with the greatest number of desired active commands for the TV to be controlled.

6. Repeat steps 1 to 5 for the other components you want to control. For future reference, write down each working component code below:

HR Series Remote Control Programming		
Assigned Push-button	Component	Program Code
TV		
CBL		
SAT		
AUX		
DVR		

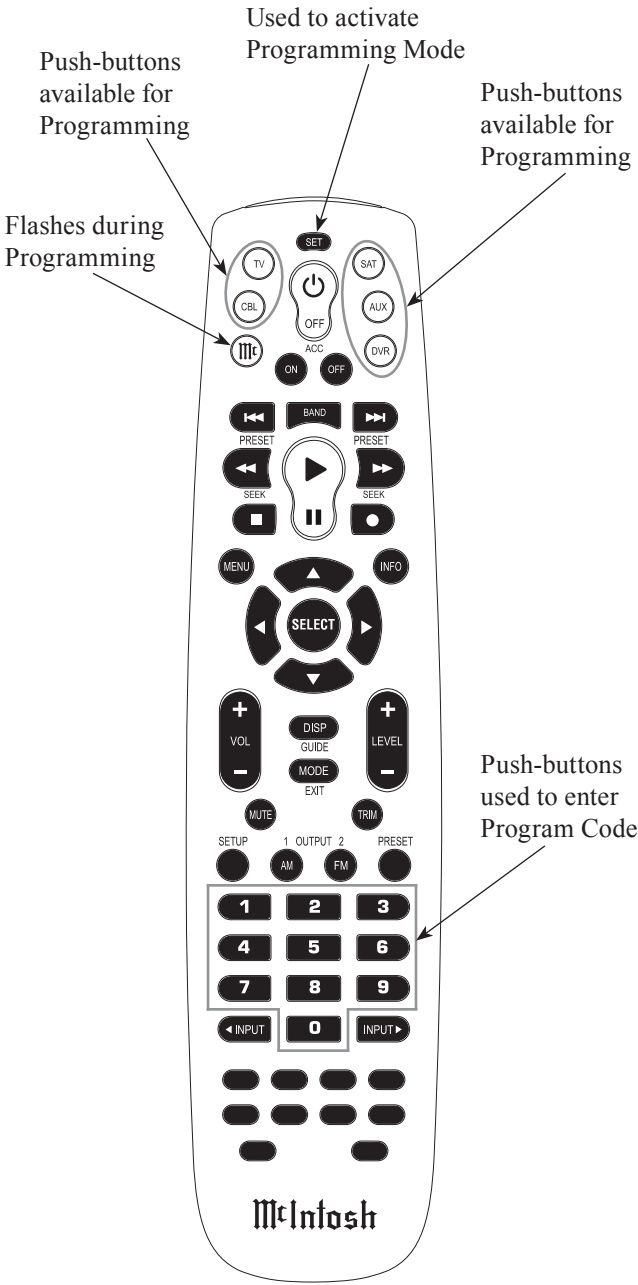 


Figure 5

Searching for Code

If your component (TV in the Programming a Component example) does not respond to the Remote Control after trying all codes listed for your (TV) brand, or if your TV brand is not listed, try searching for your code:

1. Switch On the TV you wish to control.
2. Press the TV Push-button on the Remote Control once.
3. Press and hold SET Push-button until the Push-button illumination blinks twice, then release.
4. Enter 9 9 1, then the component group number (see below). The Push-button blinks twice.

Code Number	Component Group
0	Cable (Cable Converter, Video Accessories, Satellite Receivers)
1	TV
2	VCR (VCRs, DVD Players)
3	Audio (Audio Amplifiers, Audio Amp /Tuners, CD Players)

5. Aim the Remote Control at the TV and press Power Off. The Remote Control sends IR Codes from its library to the selected TV, starting with the most popular code first. If the component responds, go to step 7.
6. If the component does not respond, press LEVEL+ Push-button and the Remote Control will test the next code for that TV type. Continue to press LEVEL+ Push-button until the TV switches Off.
Note: Press LEVEL- Push Button to try the previous code.
7. Now that you have found the correct code, press SET to save the code that worked for the TV. The Push-button will blink twice to indicate the code has been saved. To search for other component codes, repeat steps 1 to 5.

Checking the Codes

CHECKING THE CODES

If you have set up the remote using the procedure in “Searching for Your Code”, you may need to find out which five-digit code is operating your quipment. For example, to find out which code is assigned to your TV:

1. Press TV once.
 2. Press and hold SETUP until the red LED blinks twice, then release.
 3. Enter 9 9 0. The LED blinks twice.
 4. To view the code for the first digit, press 1. Count the LED blinks (for example, three blinks = 3), and write down the number in the appropriate code listing at the top of this column.
- NOTE: If a code digit is 0, the LED does not blink.
5. Repeat step 4 for the four remaining digits, using 2 for the second digit, 3 for the third digit, 4 for the fourth digit, and 5 for the fifth digit.
 6. To check for other device codes, repeat steps 1—5, substituting the device key the desired mode you would like to check.

USING LEARNING

This universal remote control includes a Learning feature (some models may not include Learning) so you can add functions that are unique to your home entertainment components (e.g., VCR Tracking Up or Down). However, there are some considerations.

Learning Precautions

- Your original remote controls must be in working order for learning to work properly.
- Learned keys are mode-specific, so each one can store a unique function for each mode.
- Do not use the following keys for learning: Device Keys, SETUP, or Record (•).
- Learning capacity is approximately 42 to 75 keys, depending on the code being learned.
- Certain device functions are not learnable including multi-frequency types, some high frequency ones, and other unusual formats.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

NOTE: Please have your original remote controls handy before programming learning.

Programming a Learned Push-button

Programming a Learned Key

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Place the Potenza head-to-head (about 2” apart) from your original remote control. Also locate the key (on your original remote control) that you want the Potenza to learn. Press the mode key you wish to learn keys on.
2. Press and hold SETUP until the LED blinks twice, then release.
3. Enter 9 7 5. The LED blinks twice.

NOTE: If the LED displays one long flash instead, either your batteries are low, or the Potenza has a memory fault. In either case, the remote cannot learn a new key.

4. Press the key on the remote you wish to learn onto. The feedback LED will blink rapidly for three seconds, suggesting the remote is ready to learn.

5. On the original remote, press and hold the key to be learned. Continue holding the key on the original remote until the Potenza’s LED blinks twice.

NOTE: If the LED displays one long blink, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the function is still not captured, press and hold SETUP to exit programming and review the “Learning Precautions” above. If needed, also see “Troubleshooting” below. After review, start programming again at step 1.

6. Repeat steps 4 through 5 for another key you would like to learn onto.



Once you have completed learning all keys, press and hold SETUP until the LED blinks twice to save all data learned.

Deleting a Single Learning Key

This process returns the key to its original programming for the mode you select. You can also delete learned programming by teaching a different function to the key (see “Programming a Learned Key”).

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press the mode key that you wish to remove the learned key from.
2. Press and hold SETUP until the LED blinks twice, then release.
3. Enter 9 7 6. The LED blinks twice.
4. Press the key containing the learned function to be deleted twice. The

LED blinks twice and exits from programming.

Deleting All Learned Keys in a Specific Mode

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press and hold SETUP until the LED blinks twice, then release.
2. Press 9 7 6. The LED blinks twice.
3. Press a mode key twice (i.e., TV, VCR/DVD, CBL/ SAT, etc.) to clear all the learned keys for that mode. The LED blinks twice and exits from programming.

Volume Lock

CHANGING VOLUME LOCK

The Potenza universal remote control comes preset to allow independent volume control of each selected device (Global Volume Unlock). However, you may change the Volume Lock setting to Global Volume Lock so that one device’s volume will control volume in all other modes. After that, you can perform Individual Volume Unlock on a selected device to set its volume control for independent operation or Global Volume Unlock to remove all volume locking.

Locking Volume Control to One Mode (Global Volume Lock)

1. Press and hold SETUP until the red LED blinks twice, then release.
2. Enter 9 9 3, the LED blinks twice.
3. Press the mode key for the device you want to control (for example, TV).
4. The LED blinks twice. Now when you press VOL+, VOL-, or Mute, the selected device (for example, TV) controls the volume regardless of the current mode.

Unlocking All Volume Control (Restoring Global Unlock)

1. Press and hold SETUP until the red LED blinks twice, then release.
2. Enter 9 9 3, the LED blinks twice.
3. Press VOL+. The LED blinks four times. Volume is independently controlled for all programmed components.

Unlocking a Single Device’s Volume Control

1. Press a device key (TV, VCR/DVD, CBL/ SAT, etc.).
2. Press and hold SETUP until the red LED blinks twice, then release.
3. Enter 9 9 3. The LED blinks twice.
4. and then press VOL-. The LED blinks four times. Volume is independently controlled for the selected components.

Amplifier

Adcom.....	30577, 31100
Bose.....	30674
Carver	30892
Curtis Mathes.....	30300
Durabrand	31561
Elan	30647
GE	30078
Harman/Kardon	30892
JVC.....	30331
Left Coast.....	30892
Lenoxx	31561
Marantz	30892
McIntosh	30251
Modulaire.....	30395
NEC	30264
Optimus.....	30395, 30013, 30300, 30823
Parasound.....	30246
Philips	30892
Pioneer	30013, 30300, 30823
Polk Audio	30892
RadioShack	30395
RCA.....	30013, 30300, 30823
Realistic.....	30395, 30013
Shure	30264
Sony	30689, 30815
Soundesign.....	30078
Victor	30331
Wards	30078, 30013
Yamaha	30354, 30133

Cable Set Top Box

A-Mark.....	00008, 00144
ABC	00237, 00003, 00008, 00014, 00017
Accuphase	00003, 00014, 00017
Acorn	00237
Action.....	00237

Active	00237
Americast.....	00899
Amino	01822
Archer	00237
BCC.....	00276
Bell & Howell	00014
Bell South.....	00899
British Telecom.....	00003
Century	00008
Citation.....	00017
Clearmaster	00883
ClearMax.....	00883
Cool Box	00883
Coolmax.....	00883
Digeo.....	01187
Digi	00637
Director	00476
Dumont	00637
DX Antenna	01500
Emerson	00014
Fosgate	00276
Fujitsu.....	01497
GE	00144
General Instrument	00476, 00810, 00276
.....	00003, 00012, 00014
Gibraltar	00003
GMI.....	00883
GoldStar	00144
Hamlin	00009, 00273
Hitachi.....	0003, 00008, 00009
Insight	00476, 00810
Jebsee	00014
Jerrold	00476, 00810, 00276, 00003, 00012, 00014
Maspro	01510
Memorex	00000
Mitsubishi	00003
Motorola.....	01376, 00476, 00810, 00276

.....	01187, 01254, 00014, 01106
Multitech	00883
Myrio	01822
NEC	01496
Nova Vision.....	00008
Novaplex	00008, 00017
NSC.....	00012, 00637
Oak.....	00017
Pace	01877, 00877, 00237, 00008
Panasonic	00000, 00008, 00144, 00107, 01488
Panther	00637
Paragon	00000, 00008, 00525
Penney.....	0000, 00637
Philips	01305, 00317
Pioneer	01877, 00877, 00144, 00533, 01500
Prism	00012
Pulsar	00000
Quasar.....	00000
RadioShack	00883
RCA.....	01256
Regal	00276, 00279, 00273
Runco	00000
Samsung.....	00003, 00144
Scientific Atlanta	01877, 00877, 00477, 00237
.....	00003, 00000, 00008, 00012
.....	00017, 01510
Sony	01006, 01460
Sprucer.....	00144
Starcom	00003, 00014
Stargate	00014
Storm.....	00637
Sumitomo.....	01500
Supercable.....	00276
Supermax	00883
Thomson	01256
Tocom.....	00012
Torx	00003

**Cable Set Top Box, con't**

Toshiba.....	00000, 01509
Tristar.....	00883
United Cable.....	00276, 00003, 00014
US Electronics.....	00276, 00003, 00008, 00017
V2.....	00883
Videoway.....	00000
Viewmaster.....	00883
Vision.....	00883
Vortex View.....	00883
Zenith.....	00000, 00525, 00899, 00017

Cable/PVR Combination

Americast.....	00899
Amino.....	01822
Digeo.....	01187
General Instrument.....	00810
Jerrold.....	00810
Motorola.....	01376, 00810, 01187, 01106
Myrio.....	01822
Pace.....	01877, 00237
Pioneer.....	01877, 00877
RCA.....	01256
Scientific Atlanta.....	01877, 00877
Sony.....	01006
Supercable.....	00276
Thomson.....	01256
Zenith.....	00899

CD Player

Acoustic Research.....	30420
Admiral.....	30305
Aiwa.....	30157
Arcam.....	30157
Audio Research.....	30157
Burmester.....	30420
Cairn.....	30157

California Audio Labs.....	30029, 30303
Cambridge Soundworks.....	30157
Carver.....	30157, 30179
Curtis Mathes.....	30032
Denon.....	30626, 30003, 30034
DKK.....	30000
DMX Electronics.....	30157
Emerson.....	30305
Fisher.....	30000, 30179
Funai.....	30305
Garrard.....	30393, 30420
Genexxa.....	30032, 30305
Grundig.....	30157
Hafler.....	30173
Harman/Kardon.....	30100, 30157, 30173
Hitachi.....	30032
Inkel.....	30157, 30180
Integra.....	30101
Jerrold.....	30003
JVC.....	30032, 30072
Kenwood.....	30626, 30000, 30029, 30028, 30037, 30190
KLH.....	31318, 31372, 31373, 31711
Krell.....	30157
Linn.....	30157
LXI.....	30179, 30305
Magnavox.....	30157, 30038, 30274, 30305
Marantz.....	30626, 30029, 30157, 30038, 30180, 30435
Matsui.....	30157
McIntosh.....	30256, 30290, 30660
MCS.....	30029
Memorex.....	30000, 30032, 30179, 30420, 30468
Micromega.....	30157
Miro.....	30000
Mission.....	30157
Modulaire.....	30000, 30032, 30087, 30179
.....	30180, 30420, 30468
MTC.....	30420

NSM.....	30157
Onkyo.....	31327, 30101
Optimus.....	30000, 30032, 30037, 30087
.....	30179, 30305, 30393, 30420, 30468
Panasonic.....	30029, 30303, 30388, 30752
Parasound.....	30420
Penney.....	30029
Philips.....	30626, 30157, 30274
Pioneer.....	31062, 30032, 31087, 30305, 30468
Polk Audio.....	30157
Proceed.....	30420
Proton.....	30157
QED.....	30157
Quad.....	30157
Quasar.....	30029
RadioShack.....	30000, 30032, 30179, 30180, 30420, 30468
RCA.....	31062, 30032, 30053, 30179, 30305, 30420, 30468
Realistic.....	30000, 30032, 30087, 30179
.....	30180, 30305, 30420, 30468
Revox.....	30157
Roksan.....	30435
Rotel.....	30157, 30420
SAE.....	30157
Sansui.....	30000, 30157, 30305
Sanyo.....	30000, 30087, 30179
Scott.....	30305
Sears.....	30179, 30305
Sharp.....	30037, 30034, 30180
Sherwood.....	30180
Sonic Frontiers.....	30157
Sony.....	30490, 30000, 30100, 31364, 30185
Sugden.....	30157
Sylvania.....	30157
Symphonic.....	30180, 30305
TAG McLaren.....	30157
Tandy.....	30032
Tascam.....	30393, 30420

Teac 30490, 30180, 30378, 30393, 30420
Technics 30029, 30303
Techwood 30303
Thule Audio 30157
Victor 30072
Wards 30032, 30157, 30053, 30087, 30179
Yamaha 30490, 30036, 31292
Yorx 30000

Home Automation

Accutec 31215
Amana 31716
Bionaire 30846, 31215
Frigidaire 31333
GE 30240
GoldStar 31537
Holmes 31215
Kenmore 31537
Lasko 30846
LG 31537
Lightolier 30184
Lutron 30597, 30318, 31239, 31597
Marmitek 30167
One For All 30167
PCS 30184
RadioShack 30240
Royal Sovereign 31651
Security System 30167
Sharper Image 30846
SmartLinc 30184
Universal 30167
Universal X10 30167
Whirlpool 31332
Windmere 31215
X10 30167

Audio - Accessory

Accurian 31106

Altec Lansing 31056, 31485
Apple 31115, 31644
Cambridge Soundworks 31530
Creative 30872
D-Link 31522
Imerge 31491
Integra 31789
iPort 31917
Marantz 31491
Motorola 31464
NaviPod 31644
Netgear 31785
Omnifi 31605
Onkyo 31789
Roku 31828
Rusound 32019
Slim Devices 31844
Sonance 31917
SSI 31522
Yamaha 31809, 31810

Video - Accessory

ABS 01272
Accurian 01653
Alienware 01272
Allegro 00160
Archer 00160
Bantor 00160
Centronic 00160
CyberPower 01272
D-Link 01554, 01731
Epson 01563
Gateway 01272
GC Electronics 00160
Hauppauge 01757
Hewlett Packard 01272, 01267
Howard Computers 01272
HP 01272, 01267

Hush 01272
iBUYPOWER 01272
Jebsee 00160
JVC 01384
Keyspan 01344
Leadtek 01614
LG 01415
Linksys 01272, 01365
Macro Image Technology 01383
Media Center PC 01272
Microsoft 01272
Mind 01272
Motorola 01363
MyHD 01383
Niveus Media 01272
Northgate 01272
Panasonic 01120
Pinnacle Systems 01268
Pioneer 01010
Princeton 00113, 00295
RadioShack 00160
Ricavision 01272
Roku 01486
Samsung 01190, 01490
Sensory Science 01126
Sharp 01010
Sony 01272, 01324, 01364
Stack 9 01272
Sylvania 01563
Systemax 01272
Tagar Systems 01272
Toshiba 01272
Touch 01272
Verator 00113
Viewsonic 01272, 01329
Vizio 01126
Voodoo 01272
ZT Group 01272

Audio Receiver

ADC.....	30531
Adcom.....	30616
Aiwa.....	31405, 30189, 30121, 31388, 31641
Akai.....	30244, 31512
Alco.....	31390
AMC.....	31077
Amphion Media Works.....	31563, 31615
AMW.....	31563, 31615
Anam.....	31609, 31074
Apex Digital.....	31257, 31430, 31774
Arcam.....	31189
Audiotronic.....	31189
Audiovox.....	31390, 31627
B & K.....	30701, 30702, 30820, 30840
BK.....	30702
Bose.....	31229, 30639, 31253, 31841, 31933
Brix.....	31602
Cairn.....	30189
Cambridge Soundworks.....	31370
Capetronic.....	30531
Carver.....	31189, 30189, 30121, 31289
Classic.....	31352
Coby.....	31389
Criterion.....	31420
Curtis Mathes.....	30014
Daewoo.....	31250
Delphi.....	31414
Denon.....	31360, 30121, 30771, 31142, 31306
Emerson.....	30531
Fisher.....	31801
Garrard.....	30463
Gateway.....	31517
Go Video.....	31532
Grundig.....	30189
Harman/Kardon.....	30110, 30189, 30891
.....	31289, 31304, 31306
Hitachi.....	31273, 31801

Initial.....	31426
Inkel.....	30491
Insignia.....	31030
Integra.....	30135, 30842, 31298, 31320
JBL.....	30110, 31306
JVC.....	31058, 30074, 31374, 31495, 31811
Kawasaki.....	31390
Kenwood.....	31313, 31570, 31569, 30186
KLH.....	31390, 31412, 31428
Koss.....	31366, 31497
Lasonic.....	31798
Lenoxx.....	31437
Lexicon.....	31076
LG.....	31293
Linn.....	30189
Liquid Video.....	31497
Magnavox.....	31189, 31269, 30189, 30391
.....	30531, 31266, 31514
Marantz.....	31189, 31269, 30189, 30891, 31289
McIntosh.....	31289
Micromega.....	31189, 30189
Mitsubishi.....	31393
Myryad.....	31189
Nakamichi.....	31313, 30097
New Castle.....	30502
Norcent.....	31389
Nova.....	31389
Onkyo.....	30135, 30380, 30842, 31298, 31320, 31531
Optimus.....	31023, 30074, 30014, 30121
.....	30186, 30502, 30531, 30670, 31074
Oritron.....	31366, 31497
Outlaw.....	30391
Panasonic.....	31308, 31518, 30309, 30367, 31288
.....	31316, 31548, 31633, 31763, 31764
Philips.....	31189, 31269, 30189, 30391, 30891, 31266
Pioneer.....	31023, 30014, 30150, 30244, 30531, 30630, 31384
Polaroid.....	31508

Polk Audio.....	30189, 31289, 31414
Proscan.....	31254
RadioShack.....	31609
RCA.....	31023, 31609, 31254, 30531, 31074, 31390, 31511
Realistic.....	31609, 30121, 30186
Regent.....	31437
Revox.....	30189
Rio.....	31869
Saba.....	31519
Samsung.....	31295, 31304, 31500
Sansui.....	31189, 30189, 31764
Sanyo.....	31251, 31469, 31801
Sharp.....	30186, 30771, 31286
Sharper Image.....	31556
Sherwood ...	30491, 30502, 31077, 31423, 31517, 31653
Shinsonic.....	31426
Sirius.....	31602, 31627, 31811, 31987
Sonic Blue.....	31532, 31869
Sony.....	31058, 31441, 31258, 31759, 31622, 30168, 30474, 31406,
.....	31558, 31658, 31758, 31858
Soundesign.....	30670
Stereophonics.....	31023
Sunfire.....	31313
Teac.....	30463, 31074, 31390, 31528
Technics.....	31308, 31518, 30309, 31384, 31633
Thorens.....	31189
Toshiba.....	30135, 30842, 31788
Venturer.....	31390
Victor.....	30074
Waitec.....	31352
Wards.....	30189, 30014
XM.....	31406, 31414
Yamaha.....	31023, 30176, 30186, 31176
.....	31276, 31331, 31375, 31476
Zenith.....	30857, 31293

Satellite Set Top Box

Aiwa.....	01514
AlphaStar.....	00772
Bell ExpressVu.....	00775
Chaparral.....	00216
Coolsat.....	01806
Crossdigital.....	01109
DirecTV.....	01377, 00392, 00566, 00639, 01639 01142, 00247, 00749, 01749, 00724 00819, 01856, 01076, 01108, 00099 01109, 01392, 01414, 01442, 01443 01444, 01609, 01640
Dish Network System.....	01505, 01005, 00775 01170, 01775
Dishpro.....	01505, 01005, 00775, 01775
DX Antenna.....	01530
Echostar.....	01505, 01005, 00775, 01170, 01775
Expressvu.....	00775, 01775
Fortec Star.....	01821
Funai.....	01377
GE.....	00392, 00566
General Instrument.....	00869
GOI.....	00775, 01775
Hisense.....	01535
Hitachi.....	00749, 00819, 01518
Houston.....	00775
HTS.....	00775, 01775
Hughes Network Systems.....	01142, 00749, 01749 01442, 01443, 01444
Humax.....	01790
iLo.....	01535
Innova.....	00099
Jerrold.....	00869
JVC.....	00775, 01170, 01507, 01775
LG.....	01226, 01414
Magnavox.....	00724, 00722
Maspro.....	01530
McIntosh.....	00869

Memorex.....	00724
Mitsubishi.....	00749
Motorola.....	00869
NEC.....	01519
Netsat.....	00099
Next Level.....	00869
Optimus.....	00724
Panasonic.....	00247, 00701, 01508
Pansat.....	01807
Paysat.....	00724
Philips.....	01142, 00749, 01749, 00775, 00724 00819, 01076, 00722, 00099, 01442
Pioneer.....	01142, 01442
Primestar.....	00869
Proscan.....	00392, 00566
Proton.....	01535
RadioShack.....	00566, 00775, 00869
RCA.....	00392, 00566, 01142, 00775 00855, 00143, 01392, 01442
Samsung.....	01377, 01142, 01276, 01108, 01109, 01442, 01609
Sharp.....	01489
SKY.....	00099
Sony.....	00639, 01639, 01524, 01640
Star Choice.....	00869
Star Trak.....	00772, 00869
Thomson.....	00392, 00566
Tivo.....	01142, 01442, 01443, 01444
Toshiba.....	00749, 01749, 00790, 00819 01285, 01501, 01530
UltimateTV.....	01392, 01640
Ultrasat.....	01806
Uniden.....	00724, 00722
US Digital.....	01535
USDTV.....	01535
Voom.....	00869
Zenith.....	01856

DBS/PVR Combination

DirecTV.....	01377, 00392, 00639, 01142 01076, 00099, 01392, 01442 01443, 01444, 01640
Dish Network System.....	01505, 00775
Dishpro.....	01505, 00775
Echostar.....	01505, 00775, 01170
Expressvu.....	00775
Hughes Network Systems.....	01142, 01442, 01443, 01444
JVC.....	01170
Motorola.....	00869
Philips.....	01142, 01442
Proscan.....	00392
RCA.....	01392
Samsung.....	01442
Sharp.....	01489
Sony.....	00639, 01640
Star Choice.....	00869

Television

A-Mark.....	10047, 10054, 10165
Accuscan.....	10047, 10018, 10135
Action.....	10030, 10185
Admiral.....	10047, 10054, 10017, 10051, 10093 10463, 10180, 10018, 10165
Advantz.....	10282
Advent.....	10761, 10783, 10815, 10817, 10842, 11933
Adventuri.....	10000
Agna.....	10150
Aiko.....	10092
Akai.....	10060, 10812, 10702, 10030, 10145 10151, 10672, 11903, 11935
Albatron.....	10700, 10843
Alfide.....	10672
Alleron.....	10030
Ambassador.....	10150, 10177
America Action.....	10180
American High.....	10000, 10060

Television, con't

Ampro 10751
 Amstrad 10171, 10177
 Amtron 10000, 10180
 Anam 10180
 Anam National 10055
 AOC 10180, 10030, 10185
 Apex Digital 0156, 10748, 10879, 10765,
 10185, 10767, 11943
 Audinac 10180
 Audiovox 10451, 10180, 10092, 10623,
 10802, 10875, 11937, 11951, 11952
 Aventura 10171
 Axion 11937
 Baysonic 10180
 Beaumark 10017, 10178, 10030
 Belcor 10030
 Bell & Howell 10054, 10154, 10093
 BenQ 11032
 Boxlight 10893
 Bradford 10180
 Brockwood 10178, 10030
 Broksonic 10236, 10463, 10180, 10177,
 11929, 11935, 11938
 Candle 10030
 Capehart 10017, 10178, 10030, 10092
 Carnivale 10030
 Carver 10054
 Celebrity 10000
 Celera 10765
 Changhong 10156, 10765, 10767, 10783
 Cinal 10451, 10092
 Citek 10047
 Citizen 10054, 10000, 10451, 10463,
 10180, 10060, 10030, 10171,
 10092, 10282, 11928
 Civet 10185
 Clairtone 10185

Clarion 10180
 Classic 10030, 10092
 Colortyme 10047, 10054, 10017, 10060,
 10178, 10030, 10018
 Commercial Solutions 11447, 10047
 Conic 10178
 Contec 10180, 10185
 Craig 10180, 10171, 10282
 Crosley 10054, 10000, 10180, 10030, 10171, 10187
 Crown 10093, 10180, 10672
 Crown Mustang 10672
 Curtis Mathes 10047, 10054, 10154, 10000,
 10051, 10451, 10093, 10180, 0060,
 10702, 10178, 10030, 10145, 10166,
 10018, 10466, 11147, 11347, 11919
 CXC 10180
 Cytron 11326
 Daewoo 10451, 10178, 10092, 11661, 10623,
 10661, 10672, 11755, 11756, 11928
 Dayton 10092
 Daytron 10178, 10030, 10092
 Dell 11080, 11178
 Denon 10145, 10055, 10511
 Denstar 10628
 Digital Life 10872
 Dumont 10017, 10180, 10178
 Durabrand 10463, 10180, 10178, 10171, 11034
 Dwin 10093, 10720, 10774
 Eaton 10060
 Electroband 10000, 10185
 Electrograph 11755
 Electrohome 0154, 10000, 10150, 10178,
 10030, 10151, 10185
 Emerald 10178, 10177
 Emerson 10047, 10154, 10451, 10236, 10463,
 10180, 10150, 10178, 10171, 11944,
 11929, 11928, 10623, 10282, 10185,
 10177, 10135

Envision 10030, 10813
 Epson 10833, 10840
 ESA 10812, 10171, 11944
 Fisher 10054, 10154, 10000, 10159
 Fortress 10093
 Fujitsu 10683, 10809, 10853
 Funai 10000, 10180, 10171, 11904
 Futuretech 10180
 Gateway 11755, 11756
 GE 11447, 10047, 10000, 10051, 10451,
 10060, 10178, 10030, 10135, 10055,
 10282, 11147, 11347, 10018, 11917,
 11919, 11922
 Gemini 10047
 Gibraltar 10017, 10000, 10030
 Go Video 10886
 Go Vision 11937
 GoldStar 10047, 10054, 10178, 10030,
 10018, 11154, 11926
 Gradiente 10053
 Grundig 10706, 10672, 10683
 Grundy 10180
 Grunpy 10180
 Haier 11034, 10768
 Hallmark 10236, 10180, 10178, 10135, 10187
 Harley Davidson 10000, 10180, 10060,
 10178, 10030, 11904
 Harman/Kardon 10054
 Harvard 10180
 Havermy 10093
 Heathkit 10017
 Helios 10865
 Hello Kitty 0451
 Hewlett Packard 11089, 11494, 11502
 Hisense 10748
 Hitachi 10047, 10054, 10017, 10000, 10051,
 10178, 11145, 10145, 10018, 10055,
 10151, 10185, 11904, 11960

HP	11089, 11494, 11502		10802, 11254, 11755, 11904, 11931, 11944	Optonica.....	10093, 10165
Hyundai.....	10849, 10865	Majestic.....	10017	Orion.....	10017, 10236, 10463, 10180,
Ima.....	10236, 10180, 10178	Marantz.....	11454, 10054, 10030, 10704,		10178, 11463, 10177, 11929
Infinity.....	10054		10854, 10855, 11154	Pace.....	10092
Insignia.....	10171, 11326, 11517	Matsui.....	10177	Panasonic.....	10054, 10000, 10156, 10250,
Inteq.....	10017, 10145	Matsushita.....	10250, 10051, 10650		10051, 10236, 10030, 10018, 10055, 10650,
JBL.....	10054	Maxent.....	11755, 11756		11291, 11410, 11919, 11941, 11946, 11947
JCB.....	10000	Megapower.....	10700	Panda.....	10706
Jensen.....	10761, 10815, 10817, 11933	Megatron.....	10047, 10178, 10145, 10151	Paxonic.....	10060, 10030
JIL.....	10030	MEI.....	10185	PCE.....	10156, 10060
Jutan.....	10030	Memorex.....	10154, 10463, 10180, 10150,	Penney.....	10047, 10000, 10156, 10250, 10051,
JVC.....	10054, 10053, 10030, 10055, 10731, 11253		10178, 10030, 10165, 11926		10060, 10178, 10030, 10018, 10135,
Kamp.....	10017, 10180, 10185	MGA.....	10150, 10178, 10030		10159, 11347, 11919, 11926
Kawasho.....	10030, 10185	MGN Technology.....	10178	Philco.....	10054, 10463, 10030, 10145, 10187
KEC.....	10180, 10060	Micro Genius.....	10150	Philips.....	11454, 10054, 10030, 10171,
Kenwood.....	10180, 10030	Midland.....	10047, 10017, 10051, 10018, 10135		10187, 10690, 11154, 11254
KLH.....	10156, 10180, 10765, 10767	Mitsubishi.....	10154, 10250, 10093, 11250, 10150,	Pilot.....	10051, 10060, 10178, 10030
Kloss.....	10030		10178, 10030, 10836, 10868, 11917	Pioneer.....	10166, 10055, 10679, 10866, 11260
Konka.....	10180, 10080, 10628, 10632,	Monivision.....	10700, 10843	Polaroid.....	10765, 10865, 11262, 11276, 11314,
.....	10638, 10703, 10707, 10720	Motorola.....	10054, 10051, 10093, 10150, 10055		11316, 11326, 11327, 11328, 11341
Kost.....	11262	MTC.....	10180, 10060, 10030, 10092, 10185, 10282	Portland.....	10451, 10092
KTV.....	10463, 10180, 10030, 10185	Multitech.....	10180	Precision.....	10236, 10180, 10177, 10185, 10282
Lark.....	10154	NAD.....	10156, 10178, 10166, 10866	Prima.....	10761, 10783, 10815, 10817, 11933
LG.....	10054, 11265, 10060, 10178,	NEC.....	10047, 10156, 10178, 10030, 10497,	Princeton.....	10700, 10717
.....	10030, 10700, 10856, 11154,		10704, 10882, 11704	Prism.....	10250, 10051, 10055
.....	11178, 11758	NetTV.....	11755	Proscan.....	11447, 10047, 10018, 10135,
Lloyd's.....	10236, 10180, 10030, 11904	Nikko.....	10178, 10030, 10092		10466, 11347, 11922
Logik.....	10236, 10180	Nikkodo.....	10178, 10030, 10092	Proton.....	10178, 10466
LXI.....	10047, 10054, 10017, 10154,	Nishi.....	10030, 10018	Pulsar.....	10017, 10092
.....	10000, 10156, 10051, 10093,	Norcent.....	10748, 10824, 11089	Pulser.....	10178, 10092
.....	10060, 10053, 10178, 10030,	Noshi.....	10018	Quartz.....	10150, 10178
.....	10171, 10166, 10055, 10135,	NTC.....	10092	Quasar.....	10250, 10051, 10055, 10165, 10650, 11919
.....	10018, 10159, 10165	Nyon.....	10000	Rabbit.....	10047
Magnasonic.....	10054, 10000, 10156, 10093,	Olevia.....	11144, 11240, 11331	Radio Shack.....	10047, 10154, 10180, 10150, 10178,
.....	10030, 10092, 11928	Onwa.....	10180		10030, 10165, 11904
Magnavox.....	10047, 11454, 10054, 10154, 10000,	Optimus.....	10154, 10250, 10093, 10180, 10150,		
.....	10250, 10051, 10180, 10060, 10030,		10178, 10030, 10166, 10165, 10650		
.....	10171, 10092, 10706, 10187, 10282, 10386,	Optoma.....	10887		

Television, con't

RCA.....11447, 10047, 10054, 10000, 10051,
.....10093, 10178, 11958,11953, 11948,
.....11922, 11919, 11917, 11547, 11347,
.....11247,11147, 11047, 10774, 10679,
.....10165, 10135, 10090, 10018
Realistic.....10047, 10154, 10180, 10150,
.....10178, 10030, 10165
Rhapsody10185
Road Authority10282
Runco10017, 10060, 10030, 10497, 10603
Sampo10047, 10030, 11755, 11756
Samsung.....10047, 10054, 10017, 10154, 10060,
.....10812, 10702, 10178,0030, 11959, 11903,
.....11312, 11060, 10814, 10766, 10587, 10055
Sanky10060, 10030
Sansui.....10463, 10060, 10030, 10165,
.....11904, 11929, 11935
Sanyo.....10047, 10054, 10154, 10000, 10463,
.....10171, 10159, 10799, 10893, 11755
Saville10060
Sceptre10878
Scotch.....10178
Scott10236, 10180, 10178, 10030, 10177
Sears.....10047, 10054, 10017, 10154, 10000,
.....10156, 10051, 10093, 0060, 10053,
.....10178, 10030, 10171, 10166, 10055,
.....10135, 10018, 10159, 10165, 11904, 11926
Sharp10054, 10093, 10180, 10165, 10386, 10491,
.....10688, 10689, 10818, 10851, 11393, 11917
Sheng Chia.....10093
Shivaki10178
Siemens10145
Signature.....10047, 10093, 10030, 10165, 10187
Signet11262
Simpson.....10178, 10030, 10187
Singer10060, 10092
Solar Drape10000

Sole.....10813
Sony10017, 10154, 11100, 10000, 10150,10053,
.....10080, 10632, 10834, 11904, 11925
Soundesign.....10180, 10178
Sova.....11952
Spectravision.....10156, 10178, 10159
Squareview.....10171
SR200010154, 10171
SSS10180
Starlite.....10236, 10180
Studio Experience.....10843
Superscan.....10093, 10864, 11944
Supreme10000
SV200010054
SVA10748, 10587, 10768, 10865,
.....10870, 10871, 10872
Sylvania.....10047, 10054, 10154, 10000, 10051,
.....10178, 10030, 10171, 10092, 10159,
.....10187, 11904, 11926, 11931, 11944
Symphonic .10000, 10180, 10178, 10171, 11904, 11944
Syntax11144, 11240, 11331
Tandy.....10093, 10165
Tatung10000, 10051, 10055, 11756
Teac10154, 10706, 10159, 10282, 10689
Technics10054, 10250, 10051, 10055
Technovox10030
Techview10847
Techwood.....10250, 10051, 10060, 10055
Teknika10054, 10463, 10180, 10150,
.....10060, 10178, 10092
Telecolor.....10017
Telefunken.....10702
Thomas.....10047, 10178, 11904
Thomson11447, 10047
TMK10236, 10180, 10178, 10177
TNCi10017
Tocom.....10156
Tomashi.....10282

Toshiba.....10154, 11256, 10156, 10150, 11265,
.....10060, 11145, 10145, 10166, 11945, 11936,
.....11935, 11918, 11704, 11656, 11356, 11156,
.....10845, 10832, 10650
Tosonic.....10185
Totevision.....10051
Toyomenka.....10178
Truetone.....10250, 10051, 10055
TVS10463
Ultra10092
Universal.....10047, 10135
Universum.....10177
V10864, 10885, 11755, 11756
Vector Research10030
Victor10053
Vidikron.....10054
Vidtech.....10178
Viewsonic.....10857, 10864, 10885, 11578, 11755
Viking10060
Vizio.....10864, 10885, 11499, 11756, 11758
Wards10047, 10054, 10017, 10154, 10000,10051,
.....10093, 10236,10178, 10030, 10166, 11156,
.....10866, 10187, 10165, 10151,
.....10080, 10018
Waycon.....10156
Welton10178
Westinghouse.....10000, 10451, 10885, 10889, 11282
White Westinghouse.....10451, 10236, 10463,
.....10623, 10889
World.....10451, 10236, 10463, 10180
XR-100010154, 10180, 10171
Yamaha10030, 10769, 10833, 10839
Yorx.....10030
Zenith.....10047, 10017, 10000, 10093, 10463,
.....11265, 10812, 10178, 10030, 11145,
.....10145, 10171, 10092, 11904, 11929

TV/DVD Combination

Advent.....	11933
Akai.....	11935
Apex Digital.....	11943
Audiovox.....	11937, 11951, 11952
Axion.....	11937
Broksonic.....	11935
Hitachi.....	11960
Jensen.....	11933
Panasonic.....	11941
Prima.....	11933
RCA.....	11948, 11958
Samsung.....	11903
Sansui.....	11935
Sova.....	11952
Toshiba.....	11935

TV/VCR Combination

America Action.....	10180
Audiovox.....	10180
Broksonic.....	11929
Citizen.....	11928
Curtis Mathes.....	11919
Daewoo.....	11928
Emerson.....	10236, 11928, 11929
Funai.....	11904
GE.....	11917, 11919, 11922
GoldStar.....	11926
Harley Davidson.....	11904
Hitachi.....	11904
Lloyd's.....	11904
Magnasonic.....	11928
Magnavox.....	11904, 11931
Memorex.....	11926
Mitsubishi.....	11917
Orion.....	11929
Panasonic.....	11919
Penney.....	11919, 11926

Quasar.....	11919
RadioShack.....	11904
RCA.....	11917, 11919, 11922
Samsung.....	11959
Sansui.....	11904, 11929
Sears.....	11904, 11926
Sharp.....	11917
Sony.....	11904, 11925
Sylvania.....	11931
Symphonic.....	11904
Thomas.....	11904
Toshiba.....	11918, 11936
Zenith.....	11904, 11929

TV/VCR/DVD Combination

Akai.....	11903
Broksonic.....	11938
Emerson.....	11944
ESA.....	11944
Magnavox.....	11944
Panasonic.....	11946, 11947
RCA.....	11953
Sharp.....	11917
Sylvania.....	11944
Symphonic.....	11944
Toshiba.....	11945

VCR

A-Mark.....	20037, 20240, 20000, 20278, 20046
ABS.....	21972
Admiral.....	20060, 20048, 20039, 20047, 20104, 20209, 20020, 20062, 20479
Adventura.....	20037, 20240, 20000
Adyson.....	20072
Aiko.....	20278
Aiwa.....	20037, 20000, 20124, 20307, 20479
Akai.....	20041, 20061, 20106, 20175
Alba.....	20209, 20072, 20278

Alienware.....	21972
Allegro.....	20039
America Action.....	20278
American High.....	20035, 20081
Amstrad.....	20000
Asha.....	20240
Astra.....	20035, 20240
Audiovox.....	20037, 20278, 20038
Avis.....	20000, 20072
Beaumark.....	20240
Bell & Howell.....	20035, 20048, 20039, 20000, 20104, 20046, 20479
Broksonic.....	20184, 20121, 20209, 20002, 20208, 20479, 21479
Calix.....	20037
Candle.....	20037, 20038
Canon.....	20035
Capehart.....	20002, 20020, 20062
Carrera.....	20240
Carver.....	20035, 20081
CCE.....	20072, 20278
Cineral.....	20278
Citizen.....	20035, 20037, 20240, 20000, 20209, 20278, 20479, 21278
Classic.....	20037
Colortyme.....	20060, 20035, 20045, 20278
Colt.....	20000, 20072
Craig.....	20037, 20047, 20240, 20072, 20271
Criterion.....	20000, 20072
Crosley.....	20035, 20081, 20000, 20149
Crown.....	20072, 20278
Curtis Mathes.....	20060, 20035, 20162, 20240, 20000, 20041, 20278, 20432, 20760, 21035
Cybernex.....	20240
CyberPower.....	21972
Daewoo.....	20037, 20045, 20278, 20020, 20046, 20561, 21278
Daytron.....	20037, 20278, 20020

VCR, con't		
Dell.....	21972	
Denon.....	20081, 20042	
Derwent.....	20041	
DirecTV.....	20739	
Dual.....	20000	
Durabrand.....	20039, 20038	
Dynatech.....	20240, 20000	
Electrohome.....	20060, 20037, 20240, 20000, 20043, 20209, 20061	
Electrophonic.....	20037	
Emerald.....	20184, 20121	
Emerex.....	20032	
Emerson.....	20037, 20184, 20240, 20000, 20121, 20043, 20209, 20002, 20278, 20202, 20208, 20061, 20479, 20561, 20593, 21278, 21479, 21593	
Fisher.....	20039, 20047, 20000, 20104, 20046	
Fuji.....	20035, 20033	
Fujitsu.....	20045, 20000	
Funai.....	20037, 20000, 20072, 20278, 20593, 21593	
Garrard.....	20000	
Gateway.....	21972	
GE.....	20060, 20035, 20048, 20240, 20000, 20149, 20202, 20760, 20807, 21035, 21060	
Gemini.....	20060	
General.....	20045	
Genexxa.....	20037, 20000, 20278	
Go Video.....	20240, 20432, 20526, 20614	
GoldStar.....	20035, 20037, 20039, 20000, 20278, 20038, 21237	
Goodmans.....	20037, 20081, 20000, 20072, 20278, 20020, 20062	
Gradiente.....	20000, 20008	
Granada.....	20081, 20042	
Grundig.....	20081	
Harley Davidson.....	20000	
Harman/Kardon.....	20081, 20038	
Harvard.....	20072	
Harwood.....	20072	
Headquarter.....	20046	
Hewlett Packard.....	21972	
HI-Q.....	20035, 20047, 20000	
Hitachi.....	20035, 20037, 20045, 20000, 20042, 20041, 20089, 20105, 21037	
Howard Computers.....	21972	
HP.....	21972	
Hughes Network Systems.....	20042, 20739	
Humax.....	20739	
Hush.....	21972	
Hytek.....	20047, 20000, 20072	
iBUYPOWER.....	21972	
ITT Nokia.....	20240, 20041	
Janeil.....	20240	
Jensen.....	20067, 20041	
JVC.....	20067, 20041, 20008, 20061, 21162	
KEC.....	20037, 20278	
Kenwood.....	20067, 20041, 20038, 20046	
KLH.....	20072	
Kodak.....	20035, 20037	
KTV.....	20000	
LG.....	20037, 20240, 20038, 21037	
Linksys.....	21972	
Lloyd's.....	20240, 20000, 20072, 20038, 20208	
Loewe.....	20081	
Logik.....	20240, 20000, 20072	
Lumatron.....	20278	
Luxor.....	20046, 20106	
LXI.....	20037, 20000, 20042, 20067	
M Electronic.....	20240	
Magnasonic.....	20037, 20240, 20000, 20072, 20278, 20020, 20593, 21278	
Magnavox.....	20035, 20037, 20048, 20039, 20081, 20240, 20000, 20149, 20563, 20593, 20618, 21593, 21781	
Magnin.....	20240	
Marantz.....	20035, 20081, 20038, 20062	
Marta.....	20037	
Matsui.....	20037, 20209	
Matsushita.....	20035, 20162, 20081, 21162	
Media Center PC.....	21972	
MEI.....	20035	
Memorex.....	20035, 20162, 20037, 20048, 20039, 20047, 20240, 20000, 20104, 20209, 20072, 20278, 20062, 20046, 20307, 20479, 21037, 21162, 21237, 21262	
Metz.....	20037	
MGA.....	20060, 20240, 20043, 20061	
MGN Technology.....	20240	
Microsoft.....	21972	
Midland.....	20240	
Mind.....	21972	
Minolta.....	20042, 20105	
Mitsubishi.....	20060, 20048, 20047, 20000, 20042, 20067, 20043, 20041, 20061, 20807	
Motorola.....	20035, 20048	
Movie Walker.....	20072	
MTC.....	20240, 20000, 20072	
MTX.....	20000	
Multitech.....	20039, 20000, 20072	
NAD.....	20240, 20104	
NEC.....	20104, 20067, 20041, 20038	
New Tech.....	20072	
Nikko.....	20037, 20278	
Nikkodo.....	20037, 20278	
Nishi.....	20240	
Niveus Media.....	21972	
Noblex.....	20240	
Northgate.....	21972	
Olympus.....	20035, 20162, 20104	
Onkyo.....	20222	
Optimus.....	21062, 20035, 20162, 20037, 20048, 20047, 20240, 20000, 20104, 20062,	

.....20432, 20593, 21048, 21162, 21262
 Optonica.....20062
 Orion.....20184, 20240, 20000, 20104, 20121,
20209, 20002, 20278, 20208, 20479, 21479
 Panama.....20035
 Panasonic.....21062, 20035, 20162, 20000,
20020, 20225, 20614, 20616,
21035, 21162, 21262
 Penney.....20035, 20162, 20037, 20047, 20081,
20240, 20000, 20042, 20067,
20038, 21035, 21237
 Pentax.....20042, 20105
 Philco.....20035, 20081, 20000, 20209, 20479
 Philips.....20035, 20162, 20048, 20081, 20045,
20000, 20209, 20062, 20616, 20618,
20739, 21081, 21181
 Pilot.....20037
 Pioneer.....20162, 20081, 20042, 20067
 Polk Audio.....20081
 Portland.....20278, 20020
 Presidian.....21593
 Profitronic.....20240
 Proscan.....20060, 20202, 20760, 21060
 Protec.....20000, 20072
 Protech.....20072
 Pulsar.....20039, 20240, 20278
 Pulser.....20240
 Quarter.....20046
 Quartz.....20035, 20047, 20046
 Quasar.....20035, 20162, 20002, 21035, 21162
 RadioShack.....20035, 20162, 20037, 20048,
20047, 20240, 20000, 20104,
20046, 20062, 21037, 21162
 Radix.....20037
 Randex.....20037
 RCA.....20060, 20035, 20048, 20240, 20045,
20000, 20042, 20149, 20105, 20106, 20202,
20760, 20807, 20880, 21035, 21060

Realistic.....20035, 20162, 20037, 20048, 20047,
20240, 20000, 20104, 20121, 20278,
20046, 20062, 21162
 ReplayTV.....20614, 20616
 Ricavision.....21972
 Runco.....20039
 Samsung.....20060, 20240, 20045, 20000,
20038, 20432, 20739, 21014
 Samtron.....20240
 Sanky.....20048, 20039
 Sansui.....20240, 20000, 20067, 20209, 20041,
20072, 20002, 20271, 20479, 21479
 Sanyo.....20047, 20240, 20000, 20104,
20046, 20159, 20479
 Scientific Atlanta.....20008
 Scott.....20184, 20045, 20121, 20043, 20208
 Sears.....20060, 20035, 20162, 20037, 20048, 20039,
20047, 20033, 20045, 20000, 20042, 20104,
20067, 20043, 20209, 20041, 20072, 20046,
20105, 21237
 Sharp.....20048, 20047, 20032, 20000,
20062, 20807, 20848
 Shintom.....20039, 20240, 20000, 20072, 20208
 Shogun.....20240
 Siemens.....20037, 20104
 Signature.....20060, 20035, 20037, 20048,
20000, 20149, 20046, 20479
 Singer.....20037, 20240, 20072
 Sonic Blue.....20614, 20616
 Sonographe.....20046
 Sony.....20035, 20047, 20032, 20033, 20000,
20067, 20046, 20636, 21032, 21232, 21972
 Soundmaster.....20000
 Stack.....921972
 STS.....20042, 20105
 SV2000.....20000, 20072
 SVA.....20000
 Sylvania.....20035, 20081, 20000, 20043,

.....20593, 21593, 21781
 Symphonic.....20240, 20000, 20002, 20593, 21593
 Systemax.....21972
 Tagar Systems.....21972
 Tandy.....20000, 20104
 Tatung.....20048, 20081, 20000, 20067, 20041, 20008
 Teac.....20000, 20067, 20041
 Technics.....20035, 20162, 20037, 20000
 Teknika.....20035, 20037, 20000
 Telecorder.....20240
 Telefunken.....20041, 20208
 Tevion.....20479
 Thomas.....20000, 20002
 Thomson.....20060, 20041, 20202
 Tisonic.....20278
 Tivo.....20618, 20636, 20739, 21996
 TMK.....20240, 20000, 20208
 TNIX.....20037
 Tocom.....20240
 Toshiba.....20240, 20045, 20000, 20042, 20043,
20209, 20041, 20062, 20845, 21008,
21145, 21972, 21996
 Tosonic.....20278
 Totevision.....20037, 20240
 Touch.....21972
 Trix.....20037
 Ultra.....20045, 20278, 20020
 Unitech.....20240
 Vector.....20045
 Vector Research.....20184, 20038
 Vextra.....20072
 Victor.....20067, 20041, 20008
 Video Concepts.....20045, 20061
 Videomagic.....20037
 Videosonic.....20240, 20000, 20072
 Viewsonic.....21972
 Villain.....20000
 Voodoo.....21972

**VCR, con't**

Wards	20060, 20035, 20037, 20048, 20047,
.....	20081, 20033, 20240, 20045, 20000,
.....	20042, 20043, 20041, 20072, 20038,
.....	20149, 20046, 20062, 20479, 20760
Wharfedale.....	20593
White Westinghouse	20000, 20209, 20072, 20278,
20479	
World.....	20209, 20002, 20479
XR-1000	20035, 20240, 20000, 20072, 20208
Yamaha	20041, 20038
Zenith.....	20037, 20039, 20033, 20000, 20209,
.....	20041, 20278, 20479, 21139, 21479
ZT Group	21972

DBS/PVR Combination

Hughes Network Systems	20739
Philips	20739
Samsung.....	20739

DVD/PVR Combination

Emerson	20000
RCA.....	20880
Sylvania.....	20000
Toshiba	21008, 21996

PVR

ABS.....	21972
Alienware.....	21972
CyberPower.....	21972
Dell.....	21972
DirecTV	20739
Gateway	21972
Hewlett Packard	21972
Howard Computers	21972
HP	21972
Hughes Network Systems	20739
Humax.....	20739

Hush	21972
iBUYPOWER.....	21972
Linksys.....	21972
Media Center PC.....	21972
Microsoft.....	21972
Mind	21972
Niveus Media	21972
Northgate	21972
Panasonic	20616
Philips	20618, 20739
RCA.....	20880
ReplayTV	20614, 20616
Samsung.....	20739
Sonic Blue.....	20614, 20616
Sony	20636, 21972
Stack 9.....	21972
Systemax.....	21972
Tagar Systems	21972
Tivo	20618, 20636, 20739
Toshiba	21008, 21972, 21996
Touch.....	21972
Viewsonic.....	21972
Voodoo.....	21972
ZT Group	21972

TV/VCR Combination

Aiwa	20479
America Action.....	20278
Audiovox	20278
Broksonic	20002, 20479, 21479
Citizen.....	21278
Colt.....	20072
Curtis Mathes.....	21035
Daewoo	21278
Emerson	20002, 20479, 20593, 21278, 21479
Funai	20000
GE	20240, 20807, 21035, 21060
GoldStar	21237

Harley Davidson	20000
Hitachi.....	20000
LG	21037
Lloyd's.....	20000
Magnasonic.....	20593, 21278
Magnavox.....	20000, 20593, 21781
Magnin.....	20240
Memorex	20162, 21037, 21162, 21237, 21262
MGA	20240
Mitsubishi	20043, 20807
Optimus.....	20162, 20593, 21162, 21262
Orion	20002, 20479, 21479
Panasonic	20162, 21035, 21162, 21262
Penney.....	20240, 21035, 21237
Quasar.....	20162, 21035, 21162
RadioShack	20000, 21037
RCA.....	20240, 20807, 21035, 21060
Samsung.....	21014
Sansui.....	20000, 20479, 21479
Sanyo.....	20240
Sears.....	20000, 21237
Sharp	20807
Sony	20000, 21232
Sylvania.....	21781
Symphonic	20000, 20593
Thomas.....	20000
Toshiba	20845, 21145
Zenith.....	20000, 20479, 21479

TV/VCR/DVD Combination

Sharp	20807
-------------	-------

DVD Blue Ray Disk Players

Integra	22147
LG	20741
Marantz	22414
Onkyo	22147
Panasonic	21641

Sony 21516
 Samsung 20199

DVD Players

3D LAB 20503, 20539
 Accurian 21072, 21416
 Acoustic Solutions 20730
 Advent 21016
 Afreey 20698
 Aiwa 20641
 Akai 20695, 20705, 20770, 20899, 21089
 Alba 20672, 20717
 Alco 20790
 Allegro 20869
 Amphion Media Works 20872
 AMW 20872
 Apex Digital 20533, 20672, 20717, 20755, 20794,
 20796, 20797, 20830, 21004, 21020,
 21056, 21061, 21100
 Arrgo 21023
 Aspire Digital 21168, 21407
 Audiovox 20717, 20790, 21041, 21071,
 21072, 21121, 21122
 Awa 20730
 Axion 21071, 21072
 Blaupunkt 20717
 Blue Parade 20571
 Blue Sky 20695
 Bose 21895
 Brandt 20651
 Broksonic 20695, 20868
 Byd:sign 20872
 California Audio Labs 20490
 Celestial 21020
 Centrex 20672, 21004
 Cinea 20831
 CineVision 20876, 20833, 20869
 Citizen 21003, 21277

Clairtone 20571
 Coby 20778, 21086, 21107, 21177
 Craig 20831
 Creative 20503, 20539
 Curtis Mathes 21087
 CyberHome 20816, 20874, 21023, 21024,
 21117, 21129, 21502
 Cytron 20705
 Daewoo 20784, 20705, 20770, 20833, 20869,
 21169, 21172, 21234, 21242
 Dansai 20770
 Daytek 20872
 Decca 20770
 Denon 20490, 20634
 Denver 20778
 Desay 21407
 Digitrex 20672
 Disney 20675, 21270
 DiViDo 20705
 Dual 20675, 21068, 21085
 Durabrand 21127
 DVD2000 20521
 Electrohome 21003
 Emerson 20591, 20675, 20821, 21268
 Enterprise 20591
 Entivo 20503, 20539
 Enzer 20770
 ESA 20821, 21268
 Firstline 20651
 Fisher 20670
 Funai 20675, 21268, 21334
 Gateway 21073, 21158
 GE 20522, 20815, 20717
 Go Video 20573, 20744, 20717, 20715,
 20741, 20783, 20833, 20869, 21044,
 21075, 21099, 21158, 21304, 21730
 Go Vision 21071, 21072
 GoldStar 20741, 20801, 20869

Goodmans 20790
 Gradiente 20490, 20651
 Greenhill 20717
 Grundig 20539, 20705
 Harman/Kardon 20582, 20702
 Hitachi 20573, 20664, 21247, 21764
 Hiteker 20672
 Humax 21588
 iLo 21348
 Initial 20717
 Insignia 21268
 Integra 20571, 20627
 IRT 20783
 JBL 20702
 Jensen 21016
 JMB 20695
 JVC 20558, 20623, 20867, 21164
 Kawasaki 20790
 Kenwood 20490, 20534
 KLH 20717, 20790, 21020, 21149
 Kloss 20533
 Koss 20651, 21061
 Lasonic 20627, 20798
 Lecson 21533
 Lenox 21127
 LG 20591, 20741, 20801, 20869
 LiteOn 21058, 21158, 21416, 21440
 Loewe 20511, 20741
 Logix 20783
 Magnasonic 20651, 20675
 Magnavox 20503, 20539, 20646,
 20675, 20821, 21268
 Malata 20782, 21159
 Marantz 20503, 20539, 20675
 McIntosh 21533
 Medion 20651
 Memorex 20695, 20831, 21270
 Microsoft 20522, 21708

DVD Players, con't

Minato.....	20752
Mintek.....	20839, 20717
Mitsubishi.....	21521, 20521, 21403
Momitsu.....	21082
Mustek.....	20730
NAD.....	20591, 20741
Naiko.....	20770
NEC.....	20785, 20869
Nesa.....	20717
NexxTech.....	21402
Norcent.....	21003, 20872, 21107, 21265
Onkyo.....	20503, 20627, 20792
Optimus.....	20571
Oritron.....	20651
Palsonic.....	20672
Panasonic.....	20503, 20490, 20571, 20703, 21362, 21462, 21490, 21632, 21762
Philips.....	20503, 20539, 20646, 20675, 20854, 21260, 21267, 21354
PianoDisc.....	21024
Pioneer.....	20525, 20571, 20631
Polaroid.....	21020, 21061, 21086
Polk Audio.....	20539
Portland.....	20770
Presidian.....	20675, 21072
Prima.....	21016
Proceed.....	20672
Proscan.....	20522
ProVision.....	20778
Qwestar.....	20651
Radionette.....	20741
RadioShack.....	20571
RCA.....	20522, 20571, 20717, 20790, 20822, 21022, 21132
Realistic.....	20571
Reoc.....	20752
Rio.....	20869

Rotel.....	20623
Rowa.....	20823, 21004
Saba.....	20651
Sampo.....	20698, 20752
Samsung.....	20490, 20573, 20744, 20820, 20899, 21044, 21075
Sansui.....	20695
Sanyo.....	20670, 20675, 20695, 20873, 21334
Schneider.....	20783
Schwaiger.....	20752
Sensory Science.....	21158
Sharp.....	20630, 20675, 20752, 21256, 21642
Sharper Image.....	21117
Sherwood.....	20770, 21043
Shinsonic.....	20533, 20839
Slim Art.....	20784
SM Electronic.....	20730
Sonic Blue.....	20573, 20715, 20783, 20869, 21099
Sony.....	20533, 21533, 20864, 21033, 21070, 21431
Sova.....	21122
Superscan.....	20821
SVA.....	20717, 20860
Sylvania.....	20675, 20821, 21268
Symphonic.....	20675, 20821, 21268, 21334
Tatung.....	20770
Teac.....	20571, 20717, 20790
Technics.....	20490, 20703
Technika.....	20770
Technosonic.....	20730
Tevion.....	20651
Theta Digital.....	20571
Thomson.....	20522, 20511
Tivo.....	21503, 21588
Toshiba.....	20503, 20573, 20539, 20695, 21045, 21154, 21503, 21588, 21639
Tredex.....	20800
Unimax.....	20770

United.....	20730
Universum.....	20591
Urban Concepts.....	20503, 20539
US Logic.....	20839
V.....	21064, 21226
Venturer.....	20790
Victor.....	21597
Vizio.....	21064, 21226
Xbox.....	20522, 21708
Yamaha.....	20490, 20539, 20545
Yamakawa.....	20872
Zenith.....	20503, 20591, 20741, 20869
Zeus.....	20784
Zoece.....	21265

DVD/PVR Combination

Emerson.....	20675
Go Video.....	21730
Hitachi.....	21764
Mitsubishi.....	21403
Panasonic.....	20490, 21632
Pioneer.....	20631
RCA.....	20522
Sharp.....	20630, 21256, 21642
Sony.....	21033
Sylvania.....	20675
Toshiba.....	21503, 21639
Victor.....	21597

TV/DVD Combination

Advent.....	21016
Akai.....	20695
Apex Digital.....	20830
Audiovox.....	21071, 21121, 21122
Axion.....	21071
Broksonic.....	20695
Emerson.....	20675, 21268
ESA.....	21268

Funai	21268
Go Vision	21071
Hitachi.....	21247
Insignia	21268
Jensen.....	21016
Magnavox.....	21268
Panasonic	21490
Philips	20854, 21260
Prima.....	21016
RCA.....	21022
Samsung.....	20899
Sansui.....	20695
Sova.....	21122
Sylvania.....	20675, 21268
Toshiba	20695

TV/VCR/DVD Combination

Akai.....	20899
Broksonic	20868
Emerson	20821
ESA	20821
Funai	21334
Magnavox.....	20821
Panasonic	21362, 21462
RCA.....	21132
Sharp	20630
Superscan	20821
Sylvania.....	20821
Symphonic	20821
Toshiba	21045