


Note: Refer to the MCT500 Owner's Manual page 10 for additional connection information.

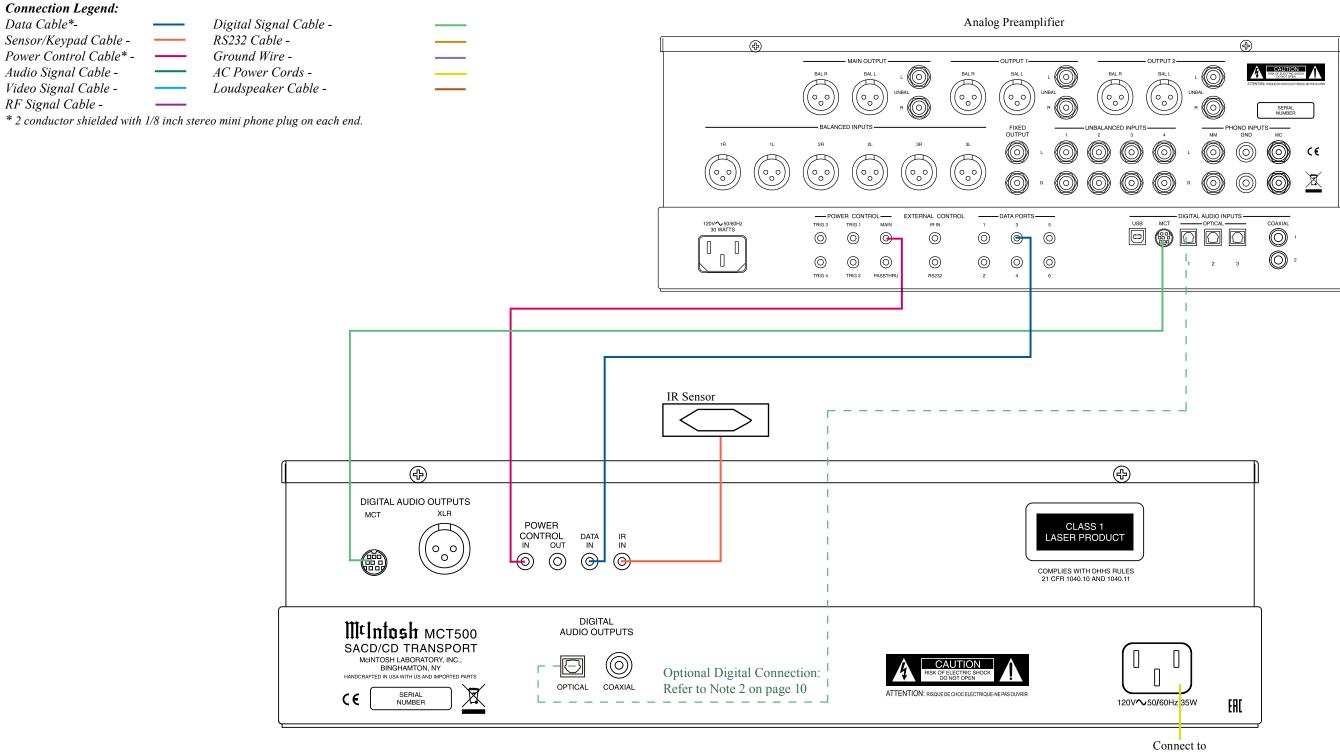

AC Outlet



Note: Refer to the MCT500 Owner's Manual page 11 for additional connection information.

